





## Installation Instructions for Flangeable Maintenance Indicator Replacement Kit

As part of the maintenance indicator product rationalization program, some maintenance indicators have been discontinued. As an alternative, a replacement maintenance indicator kit is offered, that would allow for the fitment of the new version of maintenance indicators.

The replacement kit includes the following parts:

- 1x adaptor plate (3)
- 1x current standard visual optical pop-up indicator (2)
- 1x current standard electrical switching element (1) only included in the event that an electrical indicator is being replaced
- 1x optional M12x1 4-pole connector with screw connection (4)
- 4x fixing screws for the adaptor block (not shown in picture)

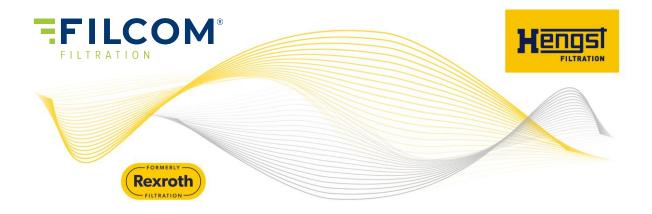

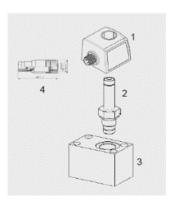

## Replacement of the flanged maintenance indicator with above mentioned replacement kit

## Disassembly of the old maintenance indicator:

- 1. Take the corresponding system out of operation and ensure that the pressure is released over the filter assembly.
- 2. Loosen the electrical cable in the event that an electrical indicator is installed.
- 3. Loosen the mounting screws of the maintenance indicators
- 4. Remove the existing maintenance indicator from the filter assembly.

## Installation of the new maintenance indicator replacement kit:

- 5. Mount the new adaptor plate (3) on the filter assembly using the supplied screws
  - Maximum tightening torque MA max = 4.4 Nm (3.25 lb-ft) +/- 10%
- 6. Install the new visual pop-up indicator (2) in the adaptor plate (3)
  - Maximum tightening torque MA max = 50 Nm (36.88 lb-ft)
- 7. Slide the electrical switching element over the visual indicator and secure with supplied circlip. The electrical switching element should be rotatable by 360°
- 8. Electrical switching element with rectangular connection as per EN175301-803 is also available as an option.
- 9. Connect the M12x1 4-pole connector (4) to the cable accordingly and screw the connector onto the electrical switching element.

An overview of our standard maintenance indicators can be found in data sheet RE51450

**Your Contact** 

FILCOM GmbH Schönbuchstr. 1 D-73760 Ostfildern Phone: +49 (0) 711-4413322-0 Fax: +49 (0) 711-4413322-22

